



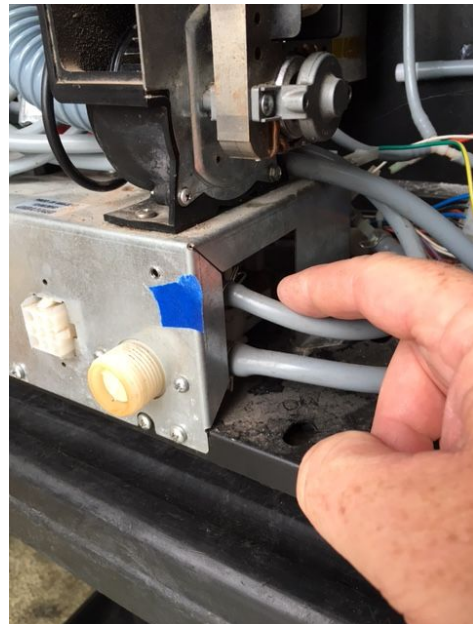

28312 Industrial Blvd
Suite H
Hayward, CA 94545
sales@gcsbrands.com
510-265-1202

How to Fix "Check Water" Error

1. Turn off the water at the source or shut off valve near the filter
2. Remove the back of the machine
3. Disconnect the waterline from the back of the machine
4. Disconnect and drain the overflow hose (small hose on top)

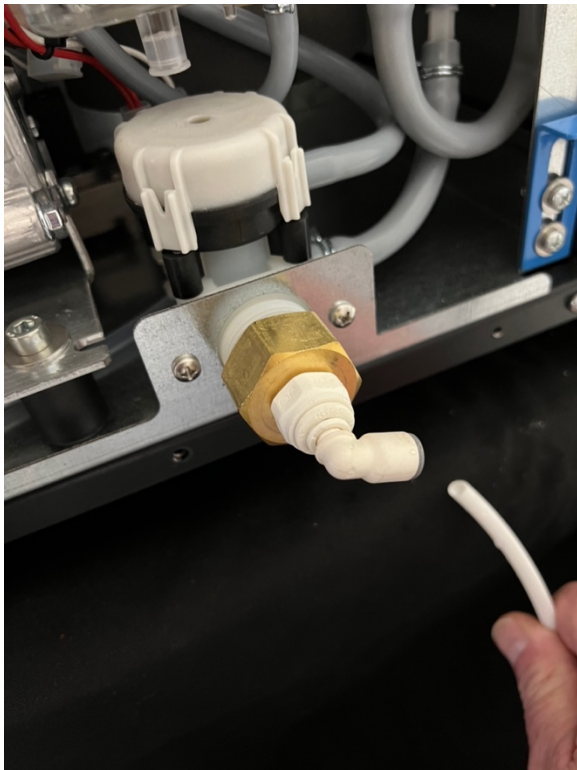

5. Reset the error, wait for "Check Water"
6. Reconnect:
 - Overflow hose
 - Waterline
7. Turn on water
8. Reset the error, check that machine fills
9. Verify that it works
10. Replace the back